

Installation Instructions PRODUCTS MADE OF NATURAL WOOD

FOLLOW THE INSTRUCTIONS BELLOW TO HAVE THE BETTER RESULT FOR YOUR ENVIROMENT

- This product is made of Brazilian wood;
- It is treated against fungus and insects and it has certification of origin;
- If necessary cut the piece, use wood saw;
- Releif mosaics are recommended only for use in walls;
- Mosaics without joins do not curve and should not be flush;
- Can be used in internal or extrenal covered areas, with no straight contact with water. In case of use in external areas, the product is subject to storms that may cause the loss of brightness, cracks and warping.

BEFORE INSTALLING

- Verify that the product complies with the specifications listed for the project;
- Make a panel with several pieces of different boxes in order to compare the tone of the product. Many of the raw materials are from nature and are subject to shade variations.


DEFINITION AND INSTALLATION OF MORTAR

- **For internal areas:**
Mortar for tiles
- **For wood walls:**
White glue
PS.: In case of using white glue, the MDF surface must be perfectly flat, not painted and with no contact with humidity.
- **For drywalls:**
Mortar for tiles or wood glue.

INSTALLING THE PRODUCT

- Let the mortar stand for 5 to 10 minutes before **installing** the product;

- Compensate the differences of thickness between mosaic and tile, avoiding the excess of mortar to the piece does not work;
- Position the piece on the mortar with the screen side down;
- Always start the application from the most visible part of the project. On walls, start the application from the bottom to the top;
- Use clean tools to not scratch the product;

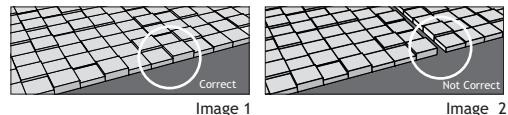

- Try to reduce the joints between the pieces for an uniform panel. If it aint possible, remove some of the extremity pieces that are difficult to fit and reposition them (images 1 and 2);
- Remove the excess of mortar in the joints and between the pieces immediately after the application.

GROUT THE INSTALLED PRODUCT

Most of the products made of wood have no joints. For this reason it is not necessary to grout. If it is necessary to grout, use a steel sponge to remove the possible excesses, after the grout has dried.

AFTER INSTALLING

For maintaining the product is recommended, if necessary, a damp cloth. For a better result can be used air spray.

If any product leakage that may cause stains, clean immediately with mild soap and cloth, sponge or soft bristle brush. Remove the waste from cleaning with damp cloth.

Remember:
IT IS IMPORTANT TO HIRE A SPECIALIZED
PROFESSIONAL TO APPLY THE PRODUCT.
RETURNS WILL BE ACCEPTED ONLY BEFORE THE PRODUCT HAS BEEN APPLIED.